

MaxiSys_Geely_V3.10 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
○ This function is not supported. ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Model	System	System Type	Read Codes	Erase Codes	Ecu Informa	Live Data	Active Test	Freeze Frame	Special Function
Merri	Engine System	Engine System MR479Q	●	●	●	●	○	○	0x07
Haoqing	Engine System	Engine System MR479Q	●	●	●	●	○	○	0x07
Beauty Leopard	Engine System	M797 Engine System	●	●	●	●	●	○	
Beauty Leopard	Engine System	Engine System MR479Q	●	●	●	●	○	○	0x07
Beauty Leopard	ABS	SABS (VW) ABS System	●	●	●	●	●		
Uliou	Engine System	M797 Engine System	●	●	●	●	●	○	
Uliou	Engine System	SABS (VW) ABS System	●	●	●	●	●		
KingKong	Engine System	M797 Engine System	●	●	●	●	●	○	
KingKong	Engine System	479QN Engine UAES M7.8 System	●	●	●	●	●	○	0x4C
KingKong	Engine System	Delphi MT80 Engine System (KWP2000)	●	●	●	●	●	●	0x4C 0x40
KingKong	Engine System	Delphi MT22U CNG System (KWP2000)	●	●	●	●	●	●	0x4D 0x0B
KingKong	ABS	SABS MK60 ABS	●	●	●	●	○	○	0x4E 0x15 0x16
KingKong	ABS	SABS MK70 ABS	●	●	●	●	○	○	0x4E 0x15 0x16
KingKong	SRS	Bosch AB8.0 Airbag	●	●	●	●	●	○	
KingKong	SRS	Yanfeng KSS Airbag	●	●	○	●	●	○	0x4D 0x2A 0x2B
Vision	Engine System	UAES EOBD Engine System	●	●	●	●	●	○	0x4C
Vision	Engine System	Delphi MT80 Engine System (KWP2000)	●	●	●	●	●	●	0x4C 0x40
Vision	Engine System	4G18N Engine Delphi MT22.1 System (KWP2000)	●	●	●	●	●	●	0x4C 0x40
Vision	Engine System	4G15N Engine Delphi MT22.1 System (KWP2000)	●	●	●	●	●	●	0x4C 0x40
Vision	Engine System	Delphi MT22.1 Engine System (CANBUS)	●	●	●	●	●	○	0x4C 0x40
Vision	Engine System	4G18N UAES Engine System (K line)	●	●	●	●	●	○	0x4C
Vision	Automatic Transmission System	DSI 6AT	●	●	●	●	○	○	
Vision	ABS	BOSCH 8.0 ABS	●	●	●	●	●	○	0x18 0x0B
Vision	ABS	SABS MK70 ABS	●	●	●	●	○	○	0x4E 0x15 0x16
Vision	ABS	Bosch ABS8 System (CANBUS)	●	●	●	●	●	○	
Vision	SRS	Jinheng 4AB Airbags	●	●	●	●	○	○	
Vision	SRS	Jinheng SRS	●	●	○	●	○	○	
Vision	SRS	East Joylong Airbags	●	●	●	●	○	○	
Vision	Immobilizer	Shanghai Industrial Theft-deterrent System	●	●	●	●	○	○	
Vision	Instrument Panel System	Aerospace Hi-Tech Instrument	●	●	●	●	●	○	0x4C 0x41
Vision	BMCS	BMCS	●	●	○	●	○	○	0x37
Free Ship	Engine System	M797 Engine System	●	●	●	●	●	○	
Free Ship	Engine System	3G10 Engine UAES EOBD System	●	●	●	●	●	○	0x4C
Free Ship	Engine System	479QN Engine UAES M7.8 System	●	●	●	●	●	○	0x4C
Free Ship	Engine System	Delphi MT20U2 Engine System	●	●	●	●	●	●	0x4C 0x0B
Free Ship	Engine System	UAES M1.5.4 System (BOSCH)	●	●	●	●	○	○	0x07
Free Ship	ABS	SABS (VW) ABS System	●	●	●	●	●		

Model	System	System Type	Read Codes	Erase Codes	Ecu Informa	Live Data	Active Test	Freeze Frame	Special Function
Free Ship	ABS	SABS MK70 ABS	●	●	●	●	○	○	0x4E 0x15 0x16
Free Ship	SRS	SRS System	●	●	●	○	○	○	
Golden Eagle	Engine System	UAES EOBD Engine System	●	●	●	●	●	○	0x4C
Golden Eagle	Engine System	Delphi MT20U2 Engine System	●	●	●	●	●	●	0x4C 0x0B
Golden Eagle	ABS	SABS MK60 ABS	●	●	●	●	○	○	0x4E 0x15 0x16
Golden Eagle	ABS	SABS MK70 ABS	●	●	●	●	○	○	0x4E 0x15 0x16
Golden Eagle	SRS	Bosch AB8.0 Airbag	●	●	●	●	●	○	
Golden Eagle	SRS	Yanfeng KSS Airbag	●	●	○	●	●	○	0x4D 0x2A 0x2B
China Dragon	Engine System	UAES Engine System (KWP2000)	●	●	●	●	●	○	0x4C
China Dragon	ABS	SABS MK70 ABS	●	●	●	●	○	○	0x4E 0x15 0x16
China Dragon	SRS	Jinheng 4AB Airbags	●	●	●	●	○	○	

Special_Function

index	Special Function Name	index	Special Function Name
0x01	Version Information	0x02	Read DTCs
0x03	Freeze Frame	0x04	Clear DTCs
0x05	DataStream	0x06	Active Test
0x07	Parameter Adjustment	0x08	Program
0x09	Special Function	0x0A	O2 Sensor Monitoring
0x0B	End-of-Line Test	0x0C	Remote Control Matching
0x0D	Service Lamp Reset	0x0E	Input Code
0x0F	Immobilizer Matching	0x10	ECU Reset
0x11	Warning Light Configuration	0x12	Steering Angle Sensor Calibration
0x13	Restore Default	0x14	Automatic Bleeding
0x15	Hydraulic Control Unit Test	0x16	Bleeding and Filling
0x17	EOBD Module	0x18	Bleeding Mode
0x19	Write Data	0x1A	Matching Function
0x1B	Reset Adaptive Value	0x1C	Vehicle Service
0x1D	Coding	0x1E	Activate Alarm Horn
0x1F	CAN Configuration Selection	0x20	CAN Configuration Input
0x21	Initialize Tire Location	0x22	ISU Reset
0x23	Fast Dormancy	0x24	Shipping Mode
0x25	Air Bleeding Function	0x26	O2 Sensor Test
0x27	Engine Test	0x28	Fuel Injector Matching
0x29	Read Fuel Injector Code	0x2A	2-Airbag Automatch
0x2B	6-Airbag Automatch	0x2C	End-of-Line Function
0x2D	Brake Bleeding	0x2E	Check Program Control Service
0x2F	Service Light	0x30	Customized List
0x31	Coding	0x32	Basic Settings
0x33	Security Access	0x34	Separate Reading
0x35	System Operation	0x36	Sensor Learn
0x37	Learn Function	0x38	Key Learn
0x39	Weaving angle speed sensor calibration	0x3A	Configuration Function
0x3B	AT And ABS/ESP Configuration	0x3C	Run-In
0x3D	ECU Reset	0x3E	ECU Configuration
0x3F	Open/Close Knock Output Command	0x40	Gear deviation learning
0x41	ICU Configuration	0x42	Vacuumpumping And Filling
0x43	Change Hydraulic pressure module refuel	0x44	Change EOL Detection Status
0x45	Change Variable Code	0x46	Manual Exhaust
0x47	Filling And drainage(3 channel)	0x48	Filling And drainage(4 channel)
0x49	EMS Collocate ACU	0x4A	match Set
0x4B	ABS Test	0x4C	Write VIN Code
0x4D	Write Data	0x4E	ECU coding
0x4F	Reset Self-Learning Value	0x50	Set Variable Code
0x51	Speed Limit	0x52	Valve Relay Off
0x53	Diagnostic Instruction	0x54	Cornering Lamp Fault Counter
0x55	Function Setting	0x56	Control LED Light Test
0x57	Remote Control Learning	0x58	Learn Keys
0x59	Configuration Setting	0x5A	Delete Sensor Information
0x5B	Off Line Matching Function	0x5C	Write Filling Status
0x5D	Ignition Function Setting	0x5E	Write EOL Test Status
0x5F	Locking All Ignition Circuits	0x60	Unlock All Ignition Circuits
0x61	Off Line Configuration Function	0x62	Clear learning code
0x63	Vehicle Configuration	0x64	EOL Function
0x65	Write Configuration Function	0x66	Exhausting and Filling 1
0x67	Exhausting and Filling 2	0x68	Erase EMS
0x69	Learn EMS	0x6A	Sensor Calibration
0x6B	Write Data Function	0x6C	Write vehicle configuration
0x6D	Write instrument panel configuration	0x6E	Steering Angle Calibration
0x6F	Service Bleeding	0x70	Write configuration information
0x71	Write network node configuration	0x72	Write function configuration

index	Special Function Name	index	Special Function Name
0x73	Write AC function configuration code	0x74	Restore factory settings
0x75	Reset underdrive emergency braking counter	0x76	ECU function configuration
0x77	Cornering angle calibration	0x78	Release lining
0x79	Seat calibration	0x7A	Steering wheel adjustment calibration
0x7B	Rear view mirror test	0x7C	Head up display reset
0x7D	Reset service mileage	0x7E	Sensor matching
0x7F	Write vehicle information data	0x80	Static side view assist test
0x81	LED warning light test	0x82	Button LED test
0x83	CIU configuration	0x84	Write vehicle model information
0x85	Write body controller information	0x86	Configure rain sensor sensitivity
0x87	Learn Remote Key	0x88	Read product mode
0x89	Delete remote control		