

# MaxiSys\_Haima\_V4.00 Function List (Note:For reference only)

## NOTES:

- This function is supported.      ※ This function may be supported, which depends on the actual condition of the vehicle.
  - This function is not supported.    ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Model	System	System Type	Read Codes	Erase Codes	Ecu Info.	Live Data	Active Test	Special Function
MAZDA-17 Arch 16PIN Connector	Power Control System	Mazda Power Control System	○	●	●	●	●	
MAZDA-17 Arch 16PIN Connector	Power Control System	UAEC Engine Management System	●	●	●	●	●	
MAZDA-17 Arch 16PIN Connector	Power Control System	Siemens Engine Management System	●	●	●	●	●	
MAZDA-17 Arch 16PIN Connector	ABS	Mazda ABS	○	●	●	●	●	
MAZDA-17 Arch 16PIN Connector	ABS	Delphi ABS	●	●	●	●	●	
MAZDA-17 Arch 16PIN Connector	ABS	MK60 ABS	●	●	●	●	●	8
MAZDA-17 Arch 16PIN Connector	ABS	BOSCH ABS	○	●	●	●	●	4
MAZDA-17 Arch 16PIN Connector	SRS	Jinzhou Jinheng Airbags	○	●	●	●	○	
MAZDA-17 Arch 16PIN Connector	SRS	Joylong Airbags	●	●	●	○	○	4
MAZDA-17 Arch 16PIN Connector	Immobilizer System	Shanghai Industrial Communication Theft-deterrent System	●	●	●	●	○	6 7 9 10 11 12 13 14 15
MAZDA-17 Arch 16PIN Connector	Immobilizer System	Lianchuang Anti-Theft System	●	●	●	●	●	4
OBD-16PIN Connector	Engine System	Mazda Power Control System	○	●	●	●	●	
OBD-16PIN Connector	Engine System	UAES Engine Management System	●	●	●	●	●	1
OBD-16PIN Connector	Engine System	Siemens Engine Management System	●	●	●	●	●	
OBD-16PIN Connector	Engine System	Siemens SCE60 system	●	●	●	●	●	1 2
OBD-16PIN Connector	Engine System	UAES ME7 system	●	●	●	●	●	19 20 21
OBD-16PIN Connector	Engine System	UAES M7 system	●	●	●	●	●	20 21
OBD-16PIN Connector	Engine System	UAES engine system (M3)	●	●	●	●	●	19 21
OBD-16PIN Connector	Engine System	UAES start-stop system	●	●	●	●	●	19 20 21 22
OBD-16PIN Connector	Engine System	DunYoung Technological System	●	●	●	●	●	19 23
OBD-16PIN Connector	Engine System	UAES - engine controller - M8	●	●	●	●	●	01 19 27
OBD-16PIN Connector	Engine System	UAES - engine controller - M8, S5, M6 with start-stop	●	●	●	●	○	23 27
OBD-16PIN Connector	AT	PUNCH VI2 transmission control unit	●	●	●	●	○	1 24
OBD-16PIN Connector	AT	UAES transmission control unit	●	●	●	●	○	

Model	System	System Type	Read Codes	Erase Codes	Ecu Info.	Live Data	Active Test	Special Function
OBD-16PIN Connector	AT	TCU (HPT- automatic transmission controller - S7,S3)	●	●	●	●	●	01 19 27
OBD-16PIN Connector	AT	TCU (HPT- automatic transmission controller - M8)	●	●	●	○	●	19 27
OBD-16PIN Connector	AT	Punch - transmission control unit - M3, M6, S5	●	●	●	●	○	41 42 43
OBD-16PIN Connector	AC	A/C control system (HVAC)	●	●	●	●	○	19 27
OBD-16PIN Connector	ABS	Mazda ABS	○	●	●	●	●	
OBD-16PIN Connector	ABS	Delphi ABS System	●	●	●	●	●	
OBD-16PIN Connector	ABS	Wanxiang 20/V5 ABS	●	●	●	●	●	19 25
OBD-16PIN Connector	ABS	Bosch ABS8 System	●	●	●	●	●	
OBD-16PIN Connector	ABS	Anti-Lock Brake System (M3)	●	●	●	●	●	19 26 27
OBD-16PIN Connector	ABS	BOSCH ABS System	○	●	●	●	●	4
OBD-16PIN Connector	ABS	ABS (MK60)System	●	●	●	●	●	8
OBD-16PIN Connector	ABS	Bosch - ABS9 system - M6, S5	●	●	●	●	●	19 27
OBD-16PIN Connector	SRS	Jinzhou Jinheng Airbags	●	●	●	●	○	
OBD-16PIN Connector	SRS	Jinheng M2 SRS	●	●	●	●	○	
OBD-16PIN Connector	SRS	SRS (Jinheng - Airbag controller - S3, SA01)	●	●	●	●	○	
OBD-16PIN Connector	SRS	Continental airbag system (M3)	●	●	●	●	○	5 19 21 28 29 30
OBD-16PIN Connector	SRS	Joylong Airbags	●	●	●	○	○	4
OBD-16PIN Connector	SRS	AUTOLIV Airbags	●	●	●	●	○	
OBD-16PIN Connector	SRS	BOSCH SRS (H2,H13)	●	●	●	●	○	
OBD-16PIN Connector	SRS	Autoliv Airbag 1	●	●	●	●	○	
OBD-16PIN Connector	SRS	Autoliv Airbag (Happin minor revision version)	●	●	●	●	○	
OBD-16PIN Connector	SRS	SRS (Bosch - Airbag controller - M8)	●	●	●	●	○	19 27
OBD-16PIN Connector	SRS	Autoliv - Airbag controller - S5	●	●	●	○	●	19 21
OBD-16PIN Connector	Immobilizer System	Shanghai Industrial Communication Theft-deterrent System	●	●	●	●	○	9 10 11 12
OBD-16PIN Connector	Immobilizer System	Association Theft-deterrent System(4G93 Engine)	●	●	●	●	●	18
OBD-16PIN Connector	Immobilizer System	DIAS immobilizer system (SA01)	●	●	●	●	●	18
OBD-16PIN Connector	Immobilizer System	IMMO (UAES - immobilizer controller - M8)	●	●	●	●	○	19 27
OBD-16PIN Connector	Immobilizer System	UAES - immobilizer controller - S5, M6 - without PEPS	●	●	●	●	○	19 27
OBD-16PIN Connector	Immobilizer System	UAES - immobilizer controller - S5, M6 - with PEPS	●	●	●	●	○	19 27
OBD-16PIN Connector	ICM	ICM (vikeer - instrument controller - S7)	●	●	●	●	○	19 27 38
OBD-16PIN Connector	ICM	ICM (Marelli - instrument controller - M8)	●	●	●	●	●	19 27 38
OBD-16PIN Connector	TPMS	Tire pressure control system (TPMS)	●	●	●	●	○	19 27

Model	System	System Type	Read Codes	Erase Codes	Ecu Info.	Live Data	Active Test	Special Function
OBD-16PIN Connector	TPMS	Steel Mate - tire pressure controller -S5	●	●	●	●	○	19 27
OBD-16PIN Connector	EPS	Zhuzhou ELITE electronic power steering system	○	●	●	○	○	
OBD-16PIN Connector	EPS	EPS (JTEKT - electronic power steering controller - M8, S7)	●	●	●	●	○	19 27
OBD-16PIN Connector	EPS	SAS (Kostal - steering angle sensor controller - S7)	●	●	●	●	○	19 27
OBD-16PIN Connector	EPS	SAS (Kostal - steering angle sensor controller - M8)	●	●	●	●	○	19 27
OBD-16PIN Connector	EPS	Electronic power steering system - s5	●	●	●	●	○	19
OBD-16PIN Connector	VECU System	Bosch ESP8 system	●	●	●	●	●	31 32 33
OBD-16PIN Connector	VECU System	Kingdom Auto body control system	●	●	●	●	●	34 35
OBD-16PIN Connector	VECU System	ESP (Bosch - electronic stability program controller - M8)	●	●	●	●	●	19 27
OBD-16PIN Connector	VECU System	Body electronic stability program (ESP) Bosch ESP9	●	●	●	●	●	19 37
OBD-16PIN Connector	VECU System	Body electronic stability program (ESP) Bosch ESP9.0-M3	●	●	●	●	●	19 37
OBD-16PIN Connector	VECU System	Gateway control system (GW)	●	●	●	●	○	19 27
OBD-16PIN Connector	VECU System	Headlamp adaptation control system (AFS)	●	●	●	●	●	19 27
OBD-16PIN Connector	VECU System	Push-start control system (PEPS)	●	●	●	●	○	19 27
OBD-16PIN Connector	VECU System	BCM (Shanghai Industrial - body controller - M8)	●	●	●	●	●	19 27
OBD-16PIN Connector	VECU System	Seat control system (DSCM)	●	●	●	●	○	19 27
OBD-16PIN Connector	VECU System	IST (SVAUTO - stereo controller - M8)	●	●	●	●	●	19 27 39 40
OBD-16PIN Connector	VECU System	IST (SVAUTO - stereo controller - S7)	●	●	●	●	●	19 27 40
OBD-16PIN Connector	VECU System	Tongzhi body control system	●	●	●	●	●	36
OBD-16PIN Connector	VECU System	Kingdom Auto - body controller - S5, M6	●	●	●	●	●	
OBD-16PIN Connector	Push-start controller	Fuxin Dare - Push-start controller - S5	●	●	●	●	●	
OBD-16PIN Connector	Push-start controller	HUF Push-start controller - M6, S5	●	●	●	●	●	27 44 45
OBD-16PIN Connector	Constraint and brake integrated controller	Constraint and brake integrated controller	●	●	●	●	●	19 27 46 47